D07 Camera

User Guide

Wosee



Connect your camera and view it on your phone.

Start here

Keep the camera, phone and router close together during setup. Have your Wi-Fi name and password ready.

D07 supports 2.4 GHz and 5 GHz Wi-Fi.


Follow these pages

1. Find the controls and power on. Pages 3-5
2. Install Wosee and choose one setup method. Pages 6-12
3. View and save video. Pages 13-17

QR code setup: 7-9
Bluetooth setup: 10-12
Setup help: 21
Sharing and alerts: 18-19

Place the camera on a stable, dry surface with a clear view. Read the care notes on page 24.

Know your camera

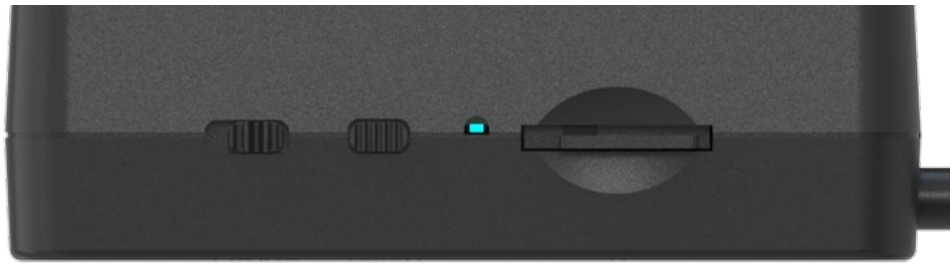

1 2 3 4

1 Power switch - slide right to ON.

2 Reset button - reset steps on page 20.

3 Status light - see page 23.

4 Card slot - insert a microSD / TF card.

The USB-C power port is on the side. See the illustration on page 5.

Charge the camera

Use a 5 V / 2 A USB power supply.

Before first use, we recommend charging the camera for 8 hours.


You can switch on and use the camera while it is connected to power.

What the red light means

The red light turns on when power is connected. It does not change when charging is complete, so it is not a full-charge indicator.

Battery life depends on use. Live viewing and recording consume battery power.

Power on

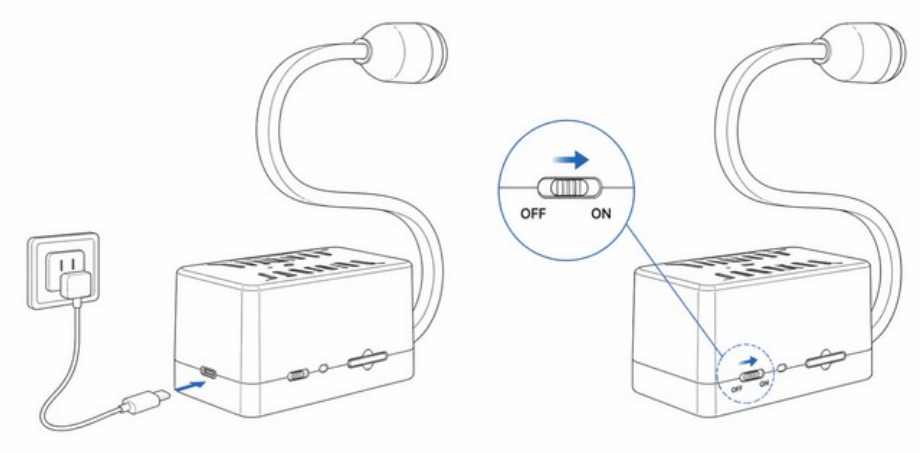

1. Connect a 5 V / 2 A USB power supply. The red light turns on when power is connected.
2. Slide the power switch right to ON.
3. Wait about 40 seconds for startup.
4. Read the blue light:
   Flashing: ready for Wi-Fi setup.
   Steady after setup: connected.
   Off during reset: reset complete.
   See page 20.

Install Wosee

Scan this QR code, or search for Wosee in your phone's app store. Download and install the app.

1. Open Wosee. Sign up or log in.
2. Turn on Wi-Fi and Bluetooth on your phone.
3. Allow Wosee to access the camera, nearby devices and local network when asked.


Choose one method:

1. QR code setup: pages 7-9.
2. Bluetooth setup: pages 10-12.

Method 1 QR code

Wait for flashing blue. Keep your phone close to the camera.

1. Open Wosee. On the Device page, tap + at the top right.

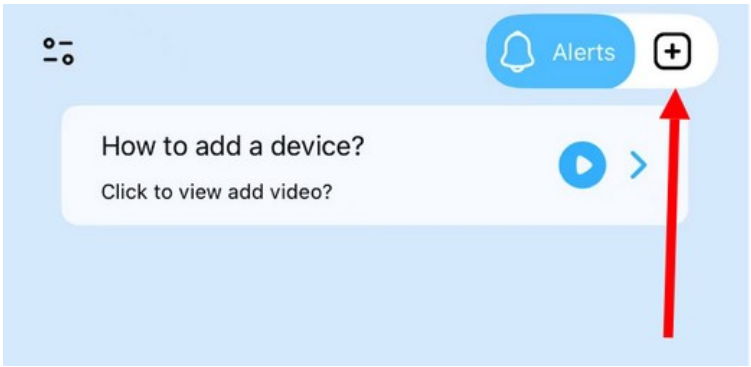


2. Use Wosee to scan the QR code on your camera.



Scan the product code, not the app download code.


QR setup WiFi

3. When your camera appears, tap Start Adding.

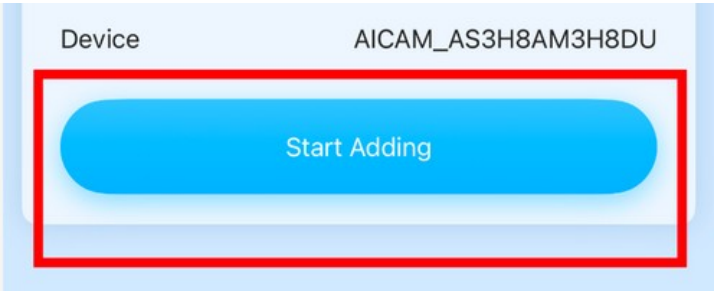

No device appears? Check power or reset after startup. See page 21.

4. Choose your home Wi-Fi and enter its password. Tap Next.

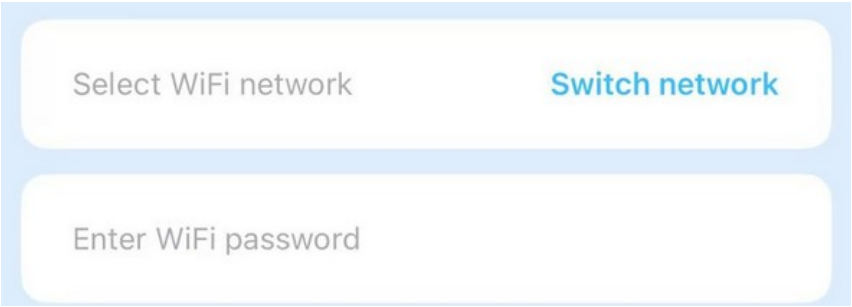


Wrong network? Tap Switch network.

Next: finish QR setup on page 9.

QR setup Finish

Keep the camera on and Wosee open while it connects.

5. When Added successfully appears, name your camera, then tap Complete.

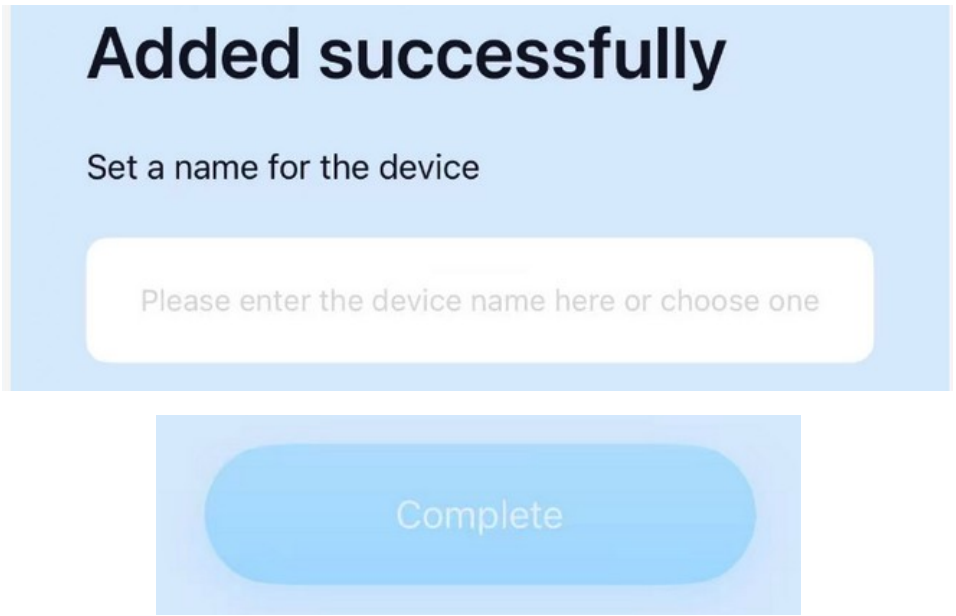


A steady blue light means the camera has connected to Wi-Fi.

On the Wosee home page, tap your camera to check live video. See page 13.


Method 2 Bluetooth

Wait for flashing blue. Turn on phone Wi-Fi and Bluetooth. Keep the phone close.

1. Open Wosee. On the Device page, tap + at the top right.

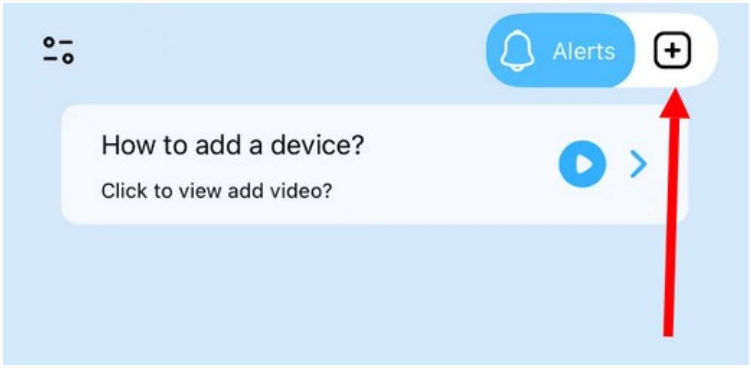


2. Select Search or add manually at the bottom of the scanner screen.

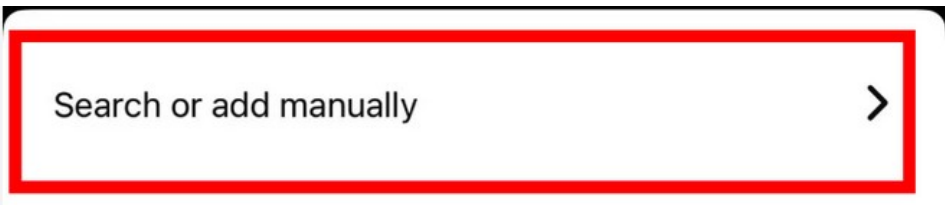

Continue with the Bluetooth search result on page 11.


Bluetooth WiFi

3. When your camera appears, tap Start Adding beside it.

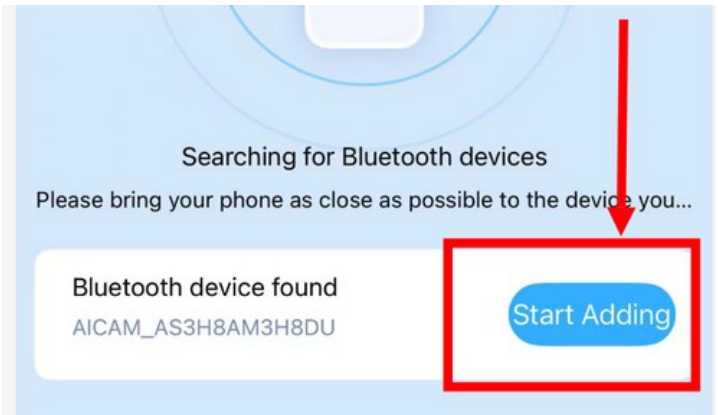

No device appears? Check power or reset after startup. See page 21.

4. Choose your home Wi-Fi and enter its password. Tap Next.

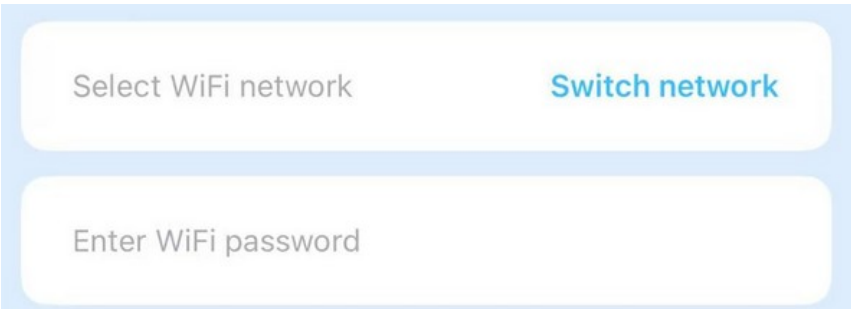


Wrong network? Tap Switch network.

Next: finish Bluetooth setup on page 12.

Bluetooth Finish

Keep the camera on and Wosee open while it connects.

5. When Added successfully appears, name your camera, then tap Complete.

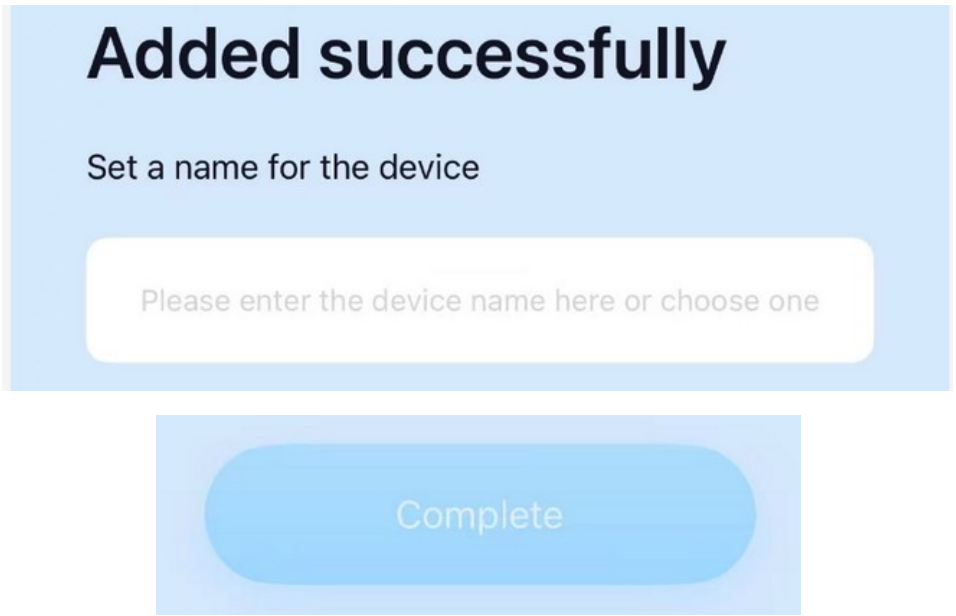

A steady blue light means the camera has connected to Wi-Fi.

On the Wosee home page, tap your camera to check live video. See page 13.

Watch live video

Tap your camera on the home page. Select Live to watch in real time.

Adjust the view

Adjust the lens arm gently. Check the view in Wosee and keep the lens clear.

Use the video controls

Use Full screen, image quality and Screenshot to adjust or capture the view.

Open camera settings

Use the camera card menu or Settings to find your device options.

Lighting requirements

Some ambient light is required. The camera has no infrared or white-light illumination.

It cannot see in complete darkness. Turn on a room light if the image is too dark.

Set up a memory card

Use a microSD / TF card up to 128 GB, rated U1 or higher.

1. Before inserting or removing the card, slide the power switch left to OFF.
2. Insert the card, then slide the power switch right to ON.
3. In camera settings, check that the card is detected and recording is enabled.

Formatting the card

Wosee has a memory card formatting tool. Formatting erases all files on the card. Save anything important before using it.

Play memory card video

Memory card playback is free. No cloud subscription is required.

The camera saves memory card recordings in MP4 format.

1. Open the camera view in Wosee.
2. Select Card playback, then choose the date and time you want to watch.

If no video appears, check that the card is detected and recording is enabled.

Back up important clips. Loop recording replaces older footage when the card runs low on space. See page 16 to save a copy.

Save memory card video

Save a clip to your phone

During Card playback, tap Record or Screen recording. Play the section you want, then tap Stop. Allow photo or storage access and check your phone album.

Copy MP4 files to a computer

Slide the power switch to OFF and remove the card. Connect it to your computer with a card reader, then copy the MP4 files to a local folder.

Before deleting files or formatting the card, check that your saved copy opens.

Use cloud storage

Cloud storage is optional and requires a subscription.

You do not need a cloud subscription to play recordings from your memory card.


1. Open the cloud recording option for your camera to view available plans.
2. To use cloud storage, choose and activate a plan in Wosee.
3. Select Cloud playback, then choose a date and event.

Available recordings and retention depend on your plan.

Share your camera

The other person needs the Wosee app and their own Wosee account.

1. On the home page, tap the three dots at the lower right of your camera card.

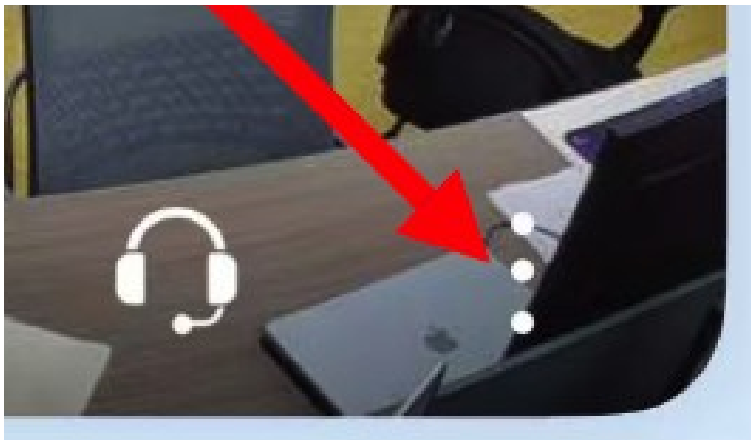

2. Choose Share, then Add sharing.
3. Enter the phone number or email address used for their Wosee account, then confirm.
4. Ask them to sign in to Wosee and check for the shared camera.

Share access only with people you trust. Keep your own account password private.

Receive event alerts

1. Open the camera settings. Enable the detection and alert options available for your D07.
2. In your phone settings, allow notifications from Wosee.
3. In Wosee, open Messages or Alerts to view detected events.

Filter by camera, event type or date, then tap an event to see its details.

If alerts do not arrive, check both the camera alert settings and your phone notification permission.

AI detection options may require an optional service.

Reset the camera

Reset only after the camera has powered on.

1. Slide the power switch to ON. Wait for the blue light to come on. A red light alone is not enough.
2. Press and hold the Reset button for 20 seconds.
3. When the blue light turns off, reset is complete. Release the button.

Connect again

Follow page 5 to power on. When blue flashes, choose QR setup (pages 7-9) or Bluetooth setup (pages 10-12).

If the blue light did not turn off, check that startup was complete, then repeat the reset steps.

If setup fails

No camera found

1. Switch on and wait about 40 seconds for flashing blue. Connect power if needed.
2. Still not found? Reset after startup. Hold Reset for 20 seconds until blue turns off. See page 20.
3. Follow page 5, then retry your chosen setup method.

Cannot connect to WiFi

Check the network name, password and router internet access. Move closer to the router.

Phone permissions

Enable Bluetooth. Allow Wosee camera, nearby-device and local network access.

If viewing fails

Camera shows offline

Check camera power and router internet access. Switch the camera off and back on. If it stays offline, remove it from Wosee and add it again.

No recordings appear

Check the selected date and storage tab. For Card playback, check that the card is detected and recording is enabled. For Cloud playback, check your plan.

A clip does not save

Allow Wosee photo or storage access. During playback, tap Record and then Stop. Check that your phone has free storage space.

The image is too dark

Turn on a room light or move to a brighter location. The camera has no built-in illumination and cannot see in complete darkness.

Understand the lights

Red light on

External power is connected. The red light does not change when the battery is fully charged.

Blue light flashing

After about 40 seconds of startup, flashing blue means the camera is ready for Wi-Fi setup.

Blue light steady after setup

The camera has connected to Wi-Fi successfully.

Blue light off during reset

After startup, hold Reset for 20 seconds. The blue light turning off confirms a successful reset. See page 20.

Care and support

Keep the camera dry and away from water. Do not disassemble it. Keep it out of reach of children.

Use strong passwords for your Wosee account and Wi-Fi network. Update them regularly.

Need help

For help, contact the seller or use customer support built into the Wosee app. Have model D07, your phone type and a description of the problem ready.

Wireless information

Wi-Fi: 2.4 GHz and 5 GHz
Frequency bands: 2400-2483.5 MHz and 5150-5725 MHz
Maximum antenna gain: 2.5 dBi